

GERDES/AIRCRAFT SPRUCE KEYLOCK MAGSWITCH SWITCHING FUNCTION

NOTES

1. "GRD" TERMINAL NEAR CENTER OF SWITCH IS USED TO TERMINATE SHIELD GROUNDS FOR P-LEAD WIRES. DO NOT CONNECT THIS TO ANY OTHER CONDUCTORS BEHIND PANEL.
2. "GRD" ADJACENT TO "R" TERMINAL BECOMES CONNECTED TO THE CENTER "GRD" TERMINAL DURING ENGINE CRANKING. BY INSTALLING A JUMPER BETWEEN THIS "GRD" TERMINAL AND "R" TERMINAL, THE RIGHT MAGNETO IS DISABLED DURING ENGINE CRANKING. IF THE RIGHT MAG IS FITTED WITH AN IMPULSE COUPLER, THE JUMPER IS NOT USED.

